

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

## SEAT COVERS

By



Featuring

**SUPER-GRIP®**

 
**THE SLIP RESISTANT FASTENING SYSTEM**

### INSTALLATION INSTRUCTIONS

FOR  
TR42-3, TR42-14  
Oe32-14

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

The **Super Grip Buckles** are self-locking. For proper usage, see diagram.

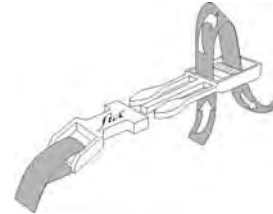


#### CUSHION COVER: 60 SIDE

1. position seat cover over seat cushion to align opening for seat belt and release latch (on TR42-3 Only)
2. pull seat cover down tightly over corners
3. unlatch seat cushion and place in up position
4. pass the front straps under the seat and secure to back buckles

Repeat above steps for **40 side**

#### BACK REST COVER:

 1. locate four loops and straps sewn into backrest cover
2. locate the 4 bolts at the back, top of seat
3. beginning with right side, hook loops over the four bolts  
see diagram (b)
4. position the right and left straps behind the edge of the back rest  
see diagram (c)
5. position the two center straps down the front of backrest
6. pull down tightly on backrest cover so that the side borders  
tuck in behind the backrest.
7. buckle right and left straps to bottom backrest buckles
8. pass two centre straps around metal brackets located at the bottom  
behind backrest  
see figure (d)
9. buckle centre two straps to bottom backrest buckles
10. adjust all straps/buckles to equalize tension for a uniform fit

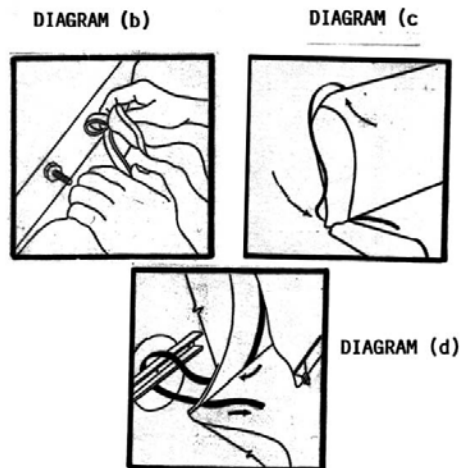

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com