

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY

FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR  
Oe32-92

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER – 60 PORTION:**

- |  |  |
|--|--|
| 1) Remove head rest (see note)   | 7) With cushion up, locate straps and secure to buckles on seat cover  |
| 2) Slip cover over backrest. Ensure cover is installed under seat belt                                       | 8) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note) |
| 3) Holding cushion up in ¾ position pass straps behind the seat straight down                                | 9) Repeat on left side   |
| 4) Smooth cover tightly from top to bottom   | 10) Adjust all straps, buckles and velcro  |
| 5) Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover |  |
| 6) Hold cushion up in ¾ position, tuck bottom of cover through crevice under backrest                        |  |

**B) BACKREST COVER – 40 PORTION:**

- |                                     |                                      |
|-------------------------------------|--------------------------------------|
| 1) Repeat steps 1 – 4 from A) above | 2) Repeat steps 6 – 10 from A) above |
|-------------------------------------|--------------------------------------|

**C) CUSHION COVER – 60 PORTION AND 40 PORTION:**

 
- |  |  |
|--|--|
| 1) Center cover on the seat                        | 4) Pass side straps and buckle                   |
| 2) Tuck back flap through crevice                  | 5) Adjust straps and buckles to equalize tension |
| 3) Lift seat and pass straps under seat and buckle |  |

**D) ARMREST COVER**

- |                      |  |
|----------------------|--|
| 1) Fold down armrest | 2) Slip cover over armrest and attach velcro |
|----------------------|--|

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

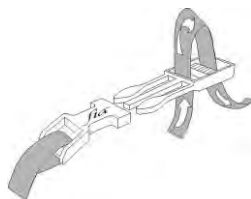


**3) RE-INSTALLATION OF HEADRESTS**


- A) Ensure pre-cut holes in seat cover align with holes in headrest base.  
B) Replace headrests

**2) HEAD REST REMOVAL:**

 - A) - Insert nail or paperclip into holes at base to release  
- Lift off



**5) BACKREST COVER BOTTOM FLAP INSTALLATION**

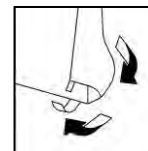 

**WARNING: SEATS WITH INTEGRATED SEAT AIRBAGS MUST BE COVERED ONLY WITH SEATCOVERS DESIGNED WITH OPENINGS THAT WILL NOT INTERFERE WITH THE DEPLOYMENT OF THE AIRBAG.. NEVER INSTALL SEAT COVERS WITHOUT THESE OPENINGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS AND COULD RESULT IN SERIOUS INJURY.**

Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com

9-17-13