

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

**OE32-45, SP82-45, TR42-45, SL62-45**  
**OE32-48, SP82-48, TR42-48, SL62-48**  
**OE32-60, SP82-60, TR42-60, SL62-60**

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER:**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest under center seat belt.. Holding cushion up in 3/4 position allows for better access. **REMOVE JACK (IF EQUIPPED WITH ONE) AND REPLACE AFTER INSTALLATION IS COMPLETE**
- 3) With seat cushion in down position, smooth cover from top to bottom
- 4) Feed the back straps behind the seat so they go all the way down. Due to restricted space, some assistance may be required. A 4" x 30" piece of cardboard with 2 slits at one end will simplify the placing of the straps. The cardboard strip can be cut from the seat cover box. (see note)

- 5) With seat cushion in down position, reach through crevice where backrest and cushion meet. Bring straps forward and buckle at the front of the cover
- 6). Tuck bottom of cover through crevice under backrest and tighten all straps
- 7) Locate bottom right flap through crevice and hold at back of seat With other hand bring the side flap around and attach (see note)
- 8) Repeat on left side
- 9) Adjust all straps, buckles and velcro

 
**B) CUSHION COVER:**

- 1) Center cover on the seat
- 2) Pull seat cover tightly side to side so that the front and back flaps tuck under seat
- 3) Pass the front straps under the seat and buckle to back flap

- 4) Pass side straps around the back of seat and buckle
- 5) adjust all straps/buckles and velcro to equalize tension for a uniform fit

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**

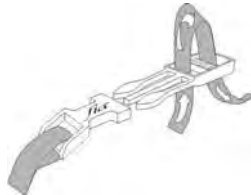

**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release
- Lift off

**OR**

- B) - Push in side release buttons
- Lift off

 
(If unable to remove consult dealership)



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

**4) FEEDING BACK STRAPS ON BACKREST**

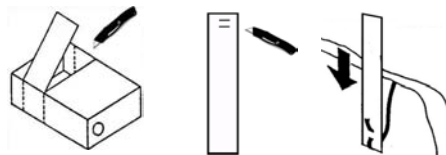

**5) BOTTOM FLAP INSTALLATION**



**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com