

If you have any comments or concerns,  
please feel free to contact our  
customer service department at:  
Toll-free: 1-800-835-0438  
OR  
Email: info@gofia.com

SEAT COVERS  
BY



FEATURING

**SUPER-GRIP®**

**THE SLIP RESISTANT FASTENING SYSTEM**

INSTALLATION INSTRUCTIONS  
FOR

TR42-24, TR42-25, TR42-49  
Oe32-24, Oe32-25, Oe32-49  
SP82-24, SP82-25, SP82-49  
SL62-24, SL62-25, SL62-49

Thank you for purchasing one of our fine quality products. Your seat cover is engineered from high quality materials and designed with precision to give you a long-lasting, well-adjusted fit.

**INSTRUCTIONS:**

**A) BACKREST COVER – 60 PORTION:**

- 1) Remove head rest (see note)
- 2) Slip cover over backrest. Ensure cover is installed under seat belt  
Holding cushion up in  $\frac{3}{4}$  position allows for better access
- 3) Pass straps behind the seat straight down
- 4) Smooth cover tightly from top to bottom
- 5) **FOR TR42-24, TR42-49, Oe32-24, Oe32-49, SP82-24, SP82-49, SL62-24, SL62-49:** Install adhesive back velcro (included) on inside edge of armrest well to align with velcro on seat cover
- 6) Hold cushion up in  $\frac{3}{4}$  position, tuck bottom of cover through crevice under backrest
- 7) With cushion up, locate straps and secure to buckles on seat cover
- 8) Locate bottom right flap through crevice and hold at back of seat. With other hand bring the side flap around and attach (see note)
- 9) Repeat on left side
- 10) Adjust all straps, buckles and velcro

**B) BACKREST COVER – 40 PORTION:**

- 1) Repeat steps 1 – 4 from A) above
- 2) Repeat steps 6 – 10 from A) above

**C) CUSHION COVER – 60 PORTION AND 40 PORTION:**

- 1) Center cover on the seat
- 2) Tuck back flap through crevice
- 3) Lift seat and pass straps under seat and buckle
- 4) Pass side straps and buckle
- 5) Adjust straps and buckles to equalize tension

**D) ARMREST COVER (TR42-24, Oe32-24, SP82-24, SL62-24, TR42-49, Oe32-49, SP82-49, SL62-49)**

- 1) Fold down armrest
- 2) Slip cover over armrest and attach velcro
- 3) **FOR TR42-49, Oe32-49, SP82-49, SL62-49** material can be tucked in between cup holder and armrest for a better look.

**NOTES:**

**1) SELF-LOCKING SUPER-GRIP® BUCKLE:**



**3) RE-INSTALLATION OF HEADRESTS**

- A) Ensure pre-cut holes in seat cover align with holes in headrest base.
- B) Replace headrests

 
**2) HEAD REST REMOVAL:**

- A) - Insert paper clip into holes at base to release
- Lift off


**OR**

- B) - Push in side release buttons
- Lift off

(If unable to remove consult dealership)

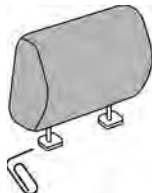

**4) BOTTOM FLAP INSTALLATION**

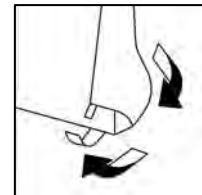 

**WARNING: NEVER INSTALL SEAT COVERS ON SEATS WITH BUILT-IN AIRBAGS AS THIS MAY INTERFERE WITH THE PROPER DEPLOYMENT OF THE AIR BAGS WHICH COULD RESULT IN SERIOUS INJURY.**



Fia Inc. Winnipeg, Canada R3L 0N3 Telephone (204) 475-0515 Toll-Free: 1-800-835-0438  
Fax: (204) 284-8246 E-Mail: info@gofia.com Website: www.gofia.com