



**20-22 Silverado HD**  
**Nylon Mud Flap Set, 1.5" Offset, Front**  
**Mounting Diagram & Instructions**  
**Kit# GCN203F**


**TO BE USED WITH SILVERADO CAP PART #FC002K**

**IMPORTANT:**


**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**



**TOOLS REQUIRED-**

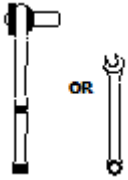


7/16" Open Wrench or  
Socket Wrench

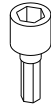

1/4" Socket Driver




T15 Torx  
Bit

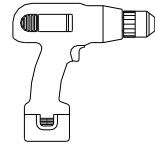

Electric or Rechargeable  
Drill


**FLAPS**

(1) Flap Assy Upper  
Front, DS  
Part #770433

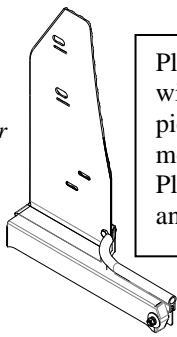


Please note: There will be a plastic piece in the upper mount channel. Please remove and discard.


(1) Flap Assy Upper  
Front, PS  
Part #770434

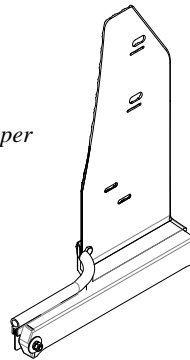


(2) Rubber Flap  
Universal  
12" x 8-3/4"

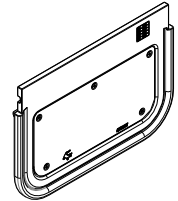

(1) Nylon Cap  
Driver Side  
Part #080642  
(Assembled on Upper Mount)

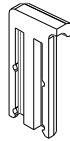

(1) Nylon Cap  
Passenger Side  
Part #080643  
(Assembled on Upper Mount)

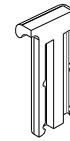

**PARTS BAG # 770424**


a) (4) Capscrew  
1/4"-20UNC x 5/8" SS, ox.  
Part #014071




b) (4) Screw, Sheet Metal, Blk Ox.  
1/4" Hex Washer Head, #8-18x1.25"  
Part # 016061




c) (4) Washer, Flat  
0.281" x 1", 18g, SS, oxid.  
Part #018069

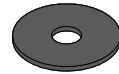

d) (2) Washer, Flat  
0.203" x 1", 18g, SS, oxid.  
Part #018070

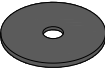


e) (2) Offset Washer  
0.203" x 1"  
Part #018080

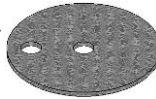


f) (2) Washer, Nylon  
0.265" x 0.625" x 0.06"  
Part #054071




g) (4) Spacer Washer  
7/16" x 1" x 1/4"  
Part #054091

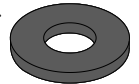


h) (2) Mud Flap Clip  
Driver Side  
Part # 769312

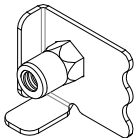

i) (2) Mud Flap Clip  
Passenger Side  
Part #769313

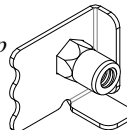


j) (2) Brace  
Front  
Part #770426

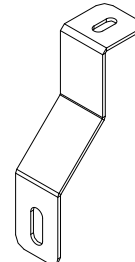


## SOLD SEPARATELY: FC002K FINISHING CAPS

(1) Molded Cap  
Driver's Side

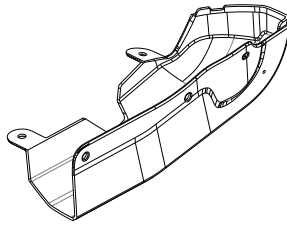

(1) Molded Cap  
Passenger's Side


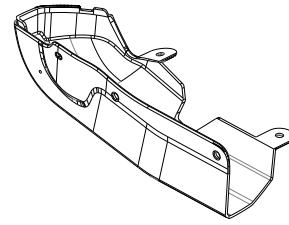


## INSTALLATION - Start with installation of Truck Hardware Finishing Cap

(For ease of installation it is suggested that the wheel be removed)

### CAPS:

1. Remove the 5 factory screws from the existing factory guard. Set this hardware aside for later reinstallation.
2. Gently pull the flare molding away from the body of the truck, and then quickly pull the guard down and away from the body of the truck to release the clip on the inside of the factory guard.
3. Slightly peel back the red 3M tape on the finishing cap and fold back so it can be fully peeled after cap is in place.
4. Position cap, ensuring the top lip of the cap slides under the fender molding as shown.
5. If installing Gatorback Mud Flaps, reinstall the factory screw on the outermost hole on the back of the finishing cap, and the two innermost holes on the front of the finishing cap.
6. Finish peeling 3M tape and press firmly on the bottom and side of the finishing cap to ensure a proper seal.
7. Repeat procedure on passenger side.

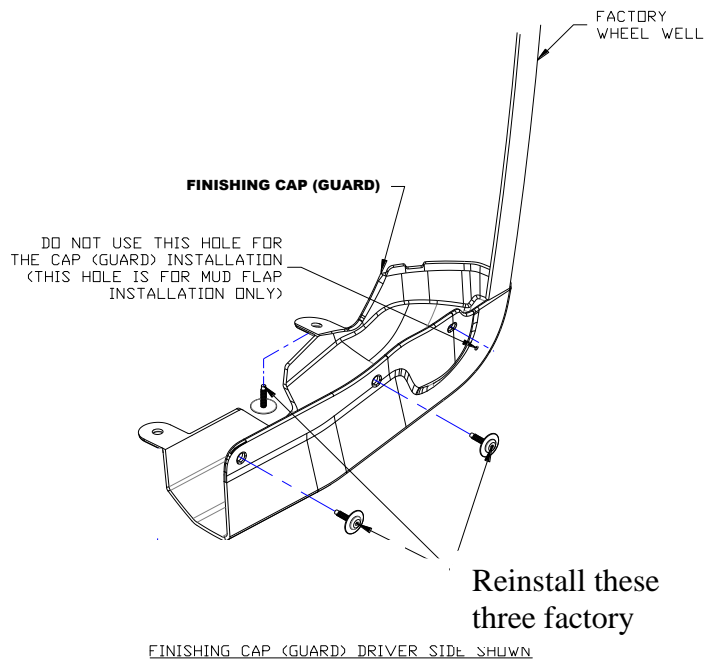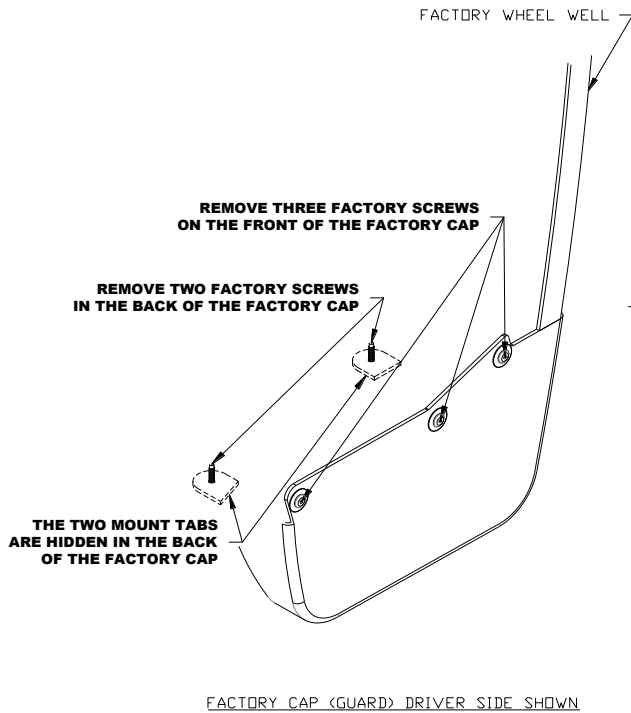


Please check out our YouTube channel to see an install video for this application.  
Silverado Front, Page 2




## ASSEMBLY OF NYLON MUD FLAPS:

1. Remove locking caps from nylon upper mounts and set aside for reinstallation.
2. Remove and discard the plastic strip inside the track at the bottom of the nylon upper mount. (See Diagram #1).
3. Slide rubber guide into track of nylon upper mount.
4. Reinstall locking cap(s) on bottom of nylon upper mount. Note: To fully lock this cap into place, you should hear two clicks. When the cap is fully locked, it will be even with the offset part of the upper mount. (See Diagram #1).
5. Repeat Procedure for second mud flap.

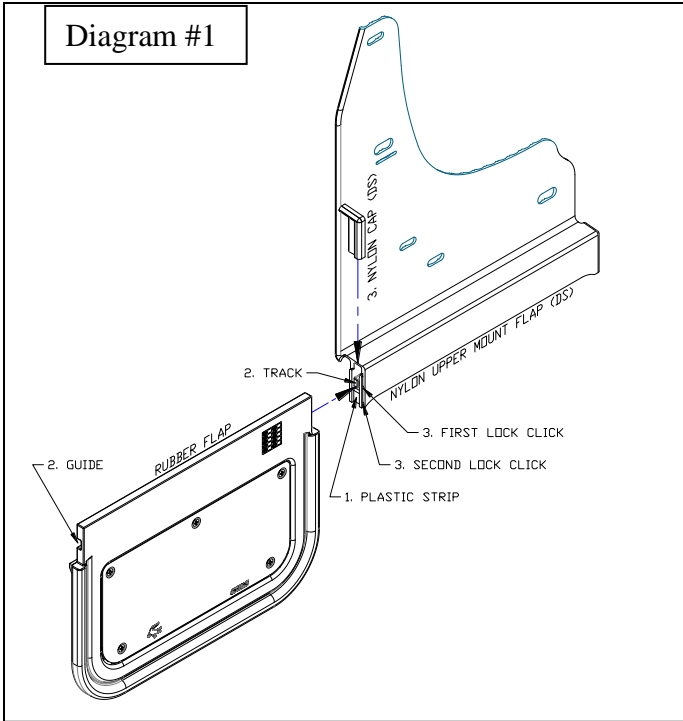


## MUD FLAPS:


1. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Remove the hex nut, lock washer, black stainless washer, and white nylon washer from the inner most mud flap hole, install brace (j), and reinstall hardware. (See Diagram #2)

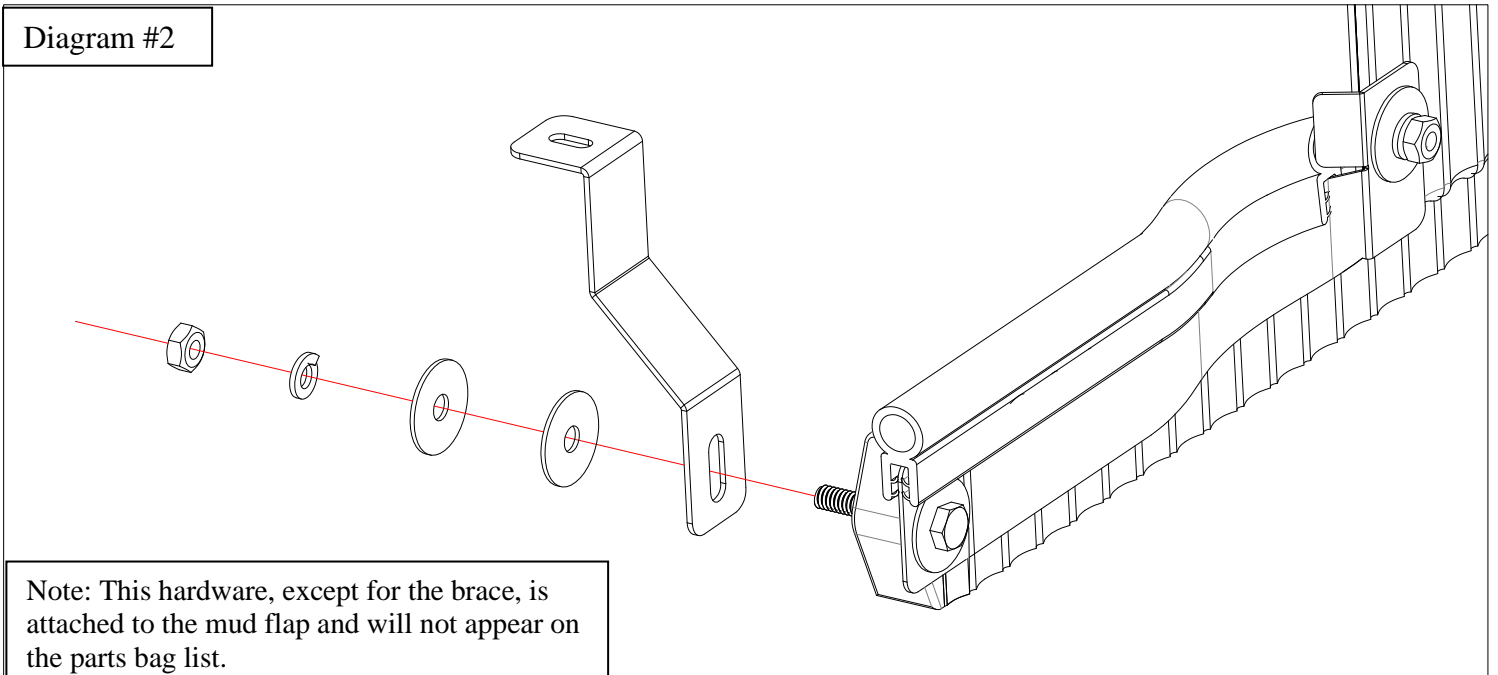

3. Install mud flap clips (h) to mud flap holes #1 & #2 using a cap screw (a), flat washer (c), and spacer washer (g). (See Diagram #3)
4. Loosely install mud flap hole #3 to finishing cap hole #5 using screw (b) and flat washer (d). (See diagram #3)
5. Slide mount clips (h) behind fender lip. (See Diagram #3)
6. Install mud flap hole #4 to finishing cap dimple #6 using a screw (b) and offset washer (e). (See Diagram #3)

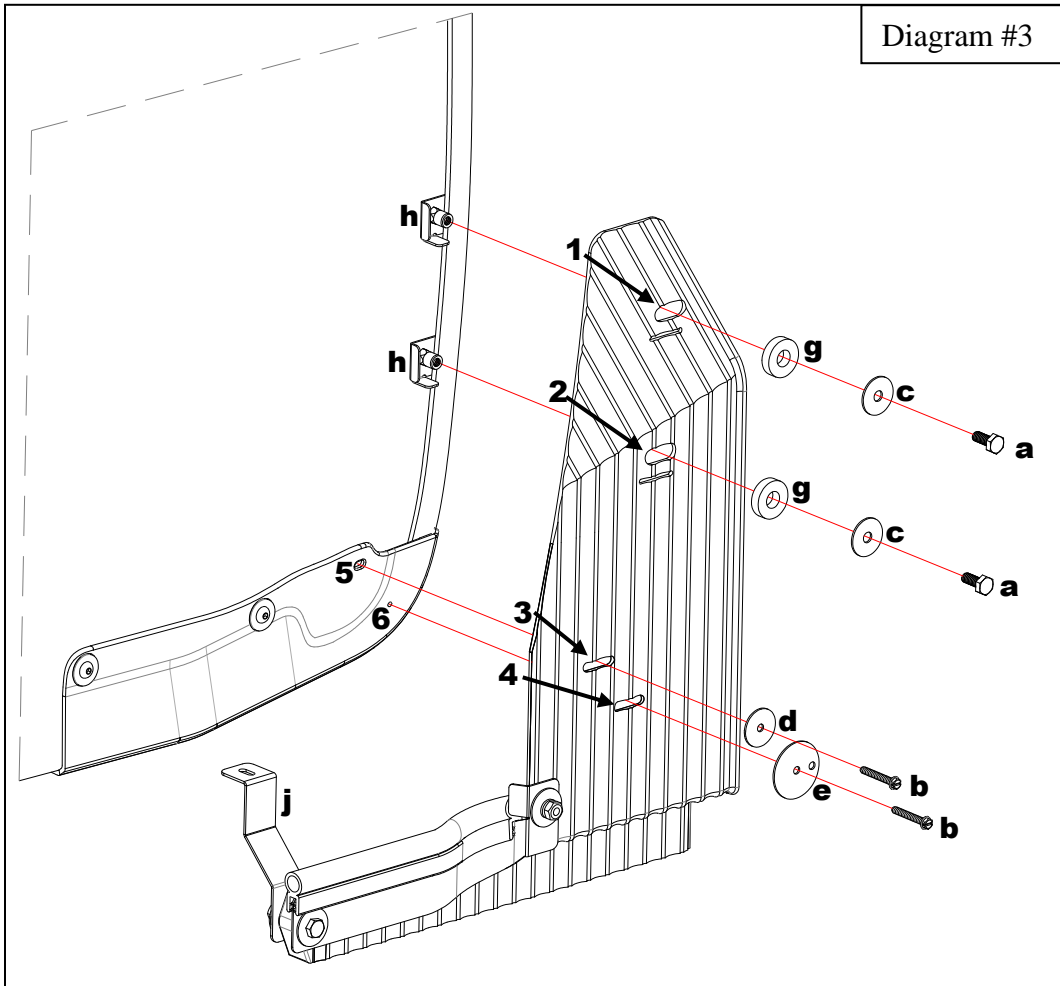

7. Install bracket hole #7 to finishing cap hole #8 using factory screw and nylon washer (f) (See Diagram #4)
8. Using a bubble level or other levelling tool, ensure that the mud flap is level. Tighten fasteners.
9. Repeat procedure for passenger side.

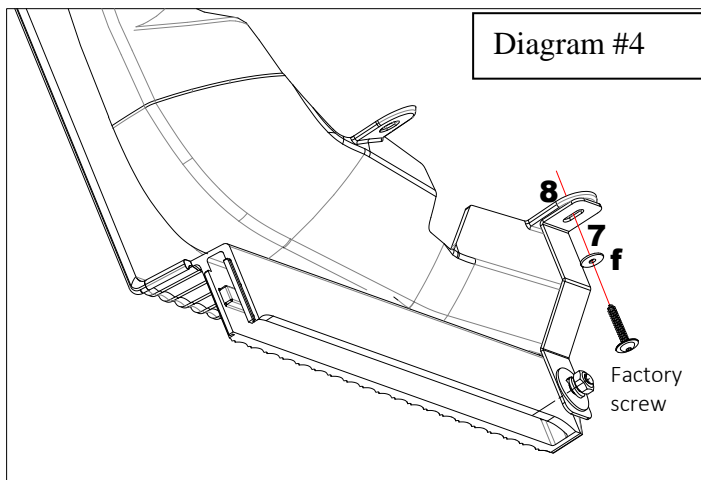

Please check out our YouTube channel to see an install video for this application.





**20-22 Silverado HD**  
**Nylon Mud Flap Set, 1.5" Offset, Rear**  
**Mounting Diagram & Instructions**  
**Kit# GCN203R**


**TO BE USED WITH SILVERADO CAP PART #FC002K**

**IMPORTANT:**


**Manufacturer is not responsible for negligent use of vehicle with mud flaps installed, including over-tightening of screws and bolts causing damage to vehicle or mud flaps.**




**TOOLS REQUIRED-**

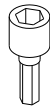

1/4" Socket Driver

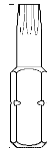


T15 Torx Bit

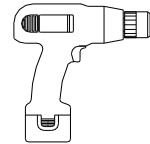


Electric or Rechargeable Drill

**FLAPS**


(1) Flap Assy Upper Front, DS  
 Part #770431

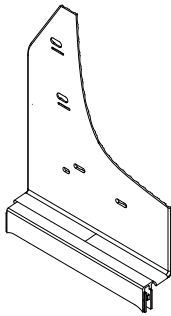

(1) Flap Assy Upper Front, PS  
 Part #770432

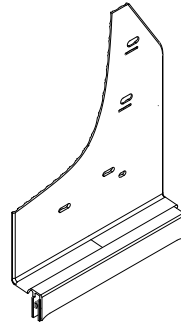


(2) Rubber Flap Universal  
 12" x 10-3/4"

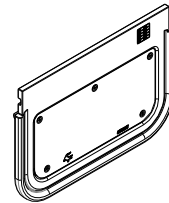


Please note: There will be a plastic piece in the upper mount channel. Please remove and discard.

(2) Nylon Cap Driver Side  
 Part #080642  
 (Assembled on Upper Mount)

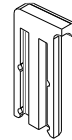

(2) Nylon Cap Passenger Side  
 Part #080643  
 (Assembled on Upper Mount)

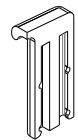

**PARTS BAG # 770425**

a) (4) Capscrew  
 1/4"-20UNC x 5/8" SS, ox.  
 Part #014071



b) (6) Screw, Sheet Metal, Blk Ox.  
 1/4" Hex Washer Head, #8-18x1.5"  
 Part # 016063




c) (4) Washer, Flat  
 0.281" x 1", 18g, SS, oxid.  
 Part #018069




d) (6) Offset Washer  
 0.203" x 1"  
 Part #018080




e) (4) Spacer Washer  
 7/16" x 1" x 1/4"  
 Part #054091

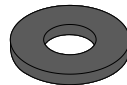

f) (2) Mud Flap Clip  
 Driver Side  
 Part # 769312

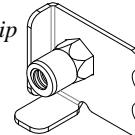


g) (2) Mud Flap Clip  
 Passenger Side  
 Part #769313

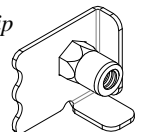


## SOLD SEPARATELY: FC002K FINISHING CAPS

(1) Molded Cap  
Driver's Side

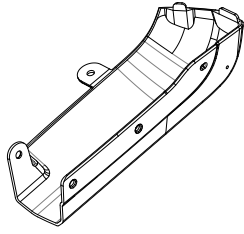

(1) Molded Cap  
Passenger's Side

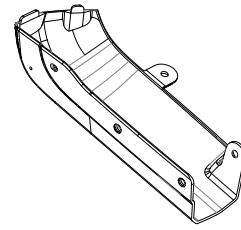


## INSTALLATION - Start with installation of Truck Hardware Finishing Cap


(For ease of installation it is suggested that the wheel be removed)

### CAPS:

1. Remove the 5 factory screws from the existing factory guard. Set this hardware aside for later reinstallation.
2. Gently pull the guard from the truck.
3. Position cap, ensuring the top lip of the cap slides under the fender molding as shown.
4. Reinstall the factory screws on the underside, back, and far inside holes of the finishing cap. Be careful not to overtighten.
5. Repeat procedure on passenger side.

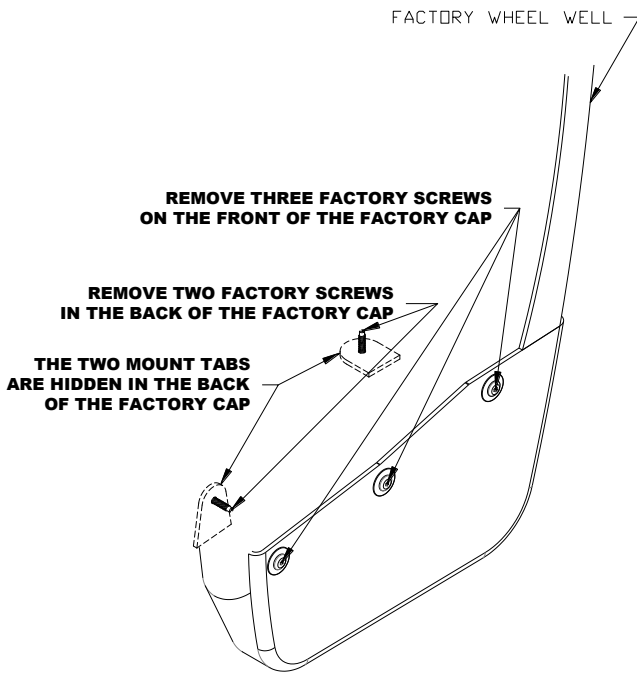

FACTORY CAP (GUARD) DRIVER SIDE SHOWN

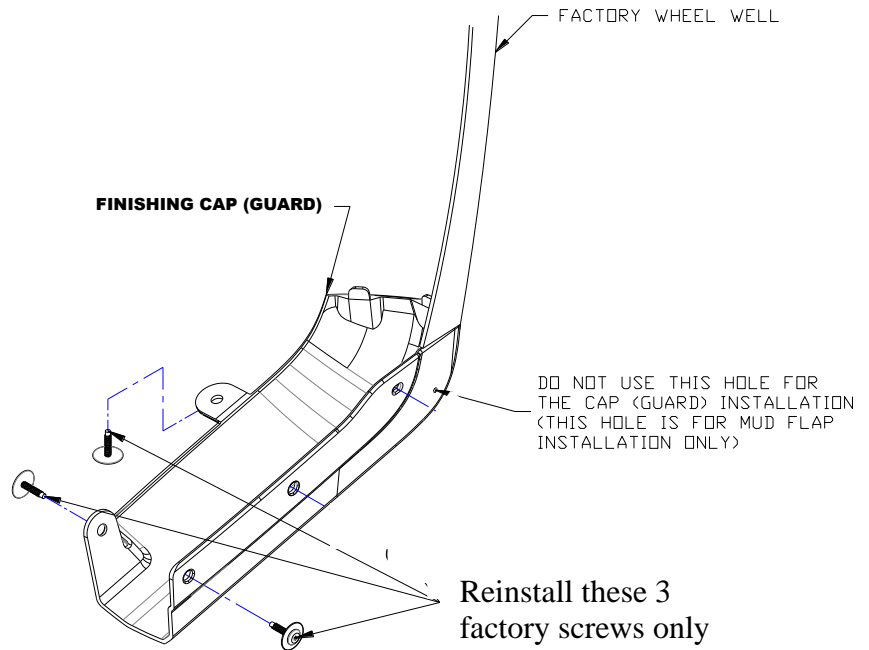


FINISHING CAP (GUARD) DRIVER SIDE SHOWN

Please check out our YouTube channel to see an install video for this application.


## ASSEMBLY OF NYLON MUD FLAPS:

1. Remove locking caps from nylon upper mounts and set aside for reinstallation.
2. Remove and discard the plastic strip inside the track at the bottom of the nylon upper mount. (See Diagram #1).
3. Slide rubber guide into track of nylon upper mount.
4. Reinstall locking cap(s) on bottom of nylon upper mount. Note: To fully lock this cap into place, you should hear two clicks. When the cap is fully locked, it will be even with the offset part of the upper mount. (See Diagram #1).
5. Repeat Procedure for second mud flap.

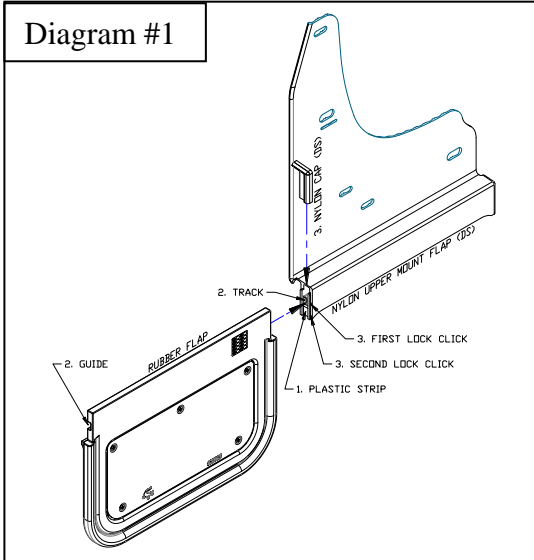

## MUD FLAPS: (See Diagram #2)

8. Before you install your Mud Flap Set, see the diagram and parts list for all necessary parts. Start on the driver's side.
2. Install mount clips (f) on mud flap holes #1 & #2 using a cap screw (a), flat washer (c), and spacer washer (e)
3. Loosely install mud flap hole #3 to finishing cap hole #6 using a screw (b) and offset washer (d).
4. Slide mount clips (f) behind fender lip.
5. Loosely install mud flap hole #5 to finishing cap hole #7 using a screw (b) and offset washer (d).
6. Loosely install mud flap hole #4 to finishing cap dimple #8 using a screw (b) and offset washer (d).
7. Using a bubble level or other levelling tool, ensure that the mud flap is level. Tighten fasteners.
8. Repeat procedure for passenger side.

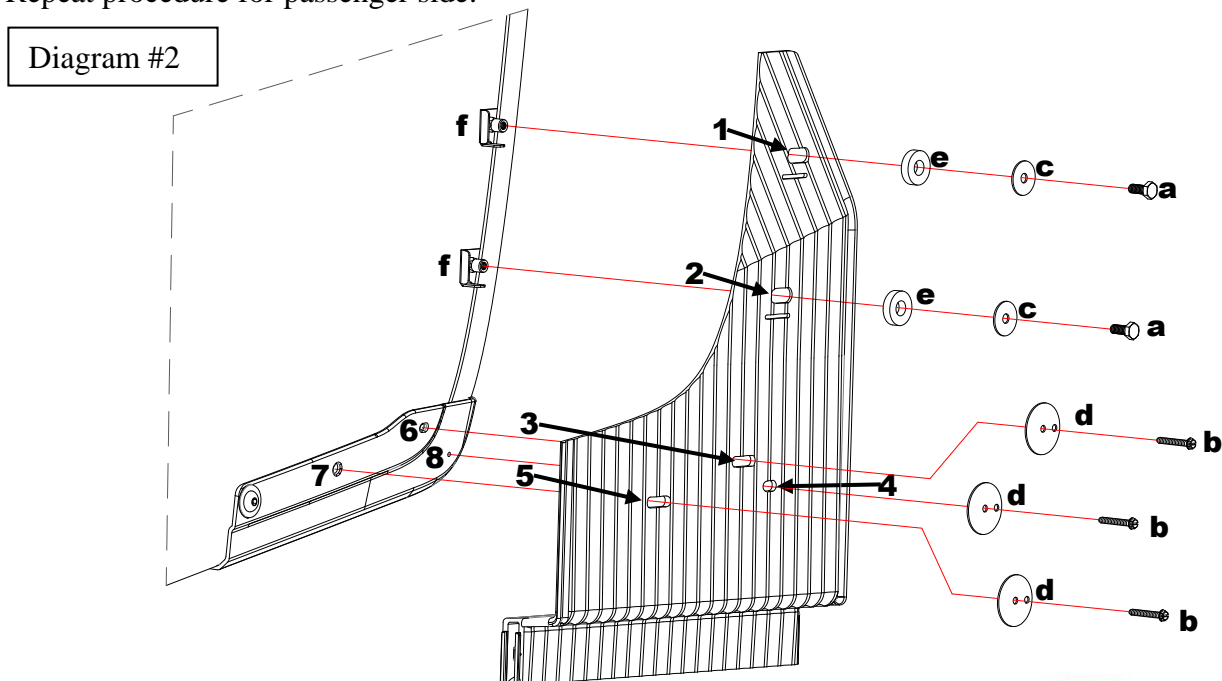

Please check out our YouTube channel to see an install video for this application.

